

Procaster Audio Player User Manual



Description

The audio player add-on kit includes everything you need to broadcast audio/messages via the Procaster AM or FM transmitters. The L and R channels are combined to mono within the Procaster AM transmitter while full stereo is available for the Procaster stereo FM transmitter.

Easy setup: just plug the audio player output into the input of the Studio Interface of the Procaster AM or into the input of the Procaster FM.

For messaging applications, a repeat function is included to allow continuous broadcast of the same message.

Audio files may be added externally to the flash or SD drive or recorded directly onto the drives from the AUX and OPTICAL inputs. These audio files will be recorded in MP3 format at 48kHz, stereo, 128kb/s.

Built-in Bluetooth allows external audio to be broadcast/recorded onto drives from external devices such as smartphones.

Procaster Audio Player User Manual


Front panel



Short Press:	Mute
Long Press:	Turn On/Off
Left Turn :	Volume -/ Contrast-
Right Turn :	Volume +/ Contrast+

Short Press:	Play/Pause
Long Press:	Confirm
Left Turn :	Song List
Left Turn :	Previous/ Contrast-
Right Turn :	Next/ Contrast+


Rear panel

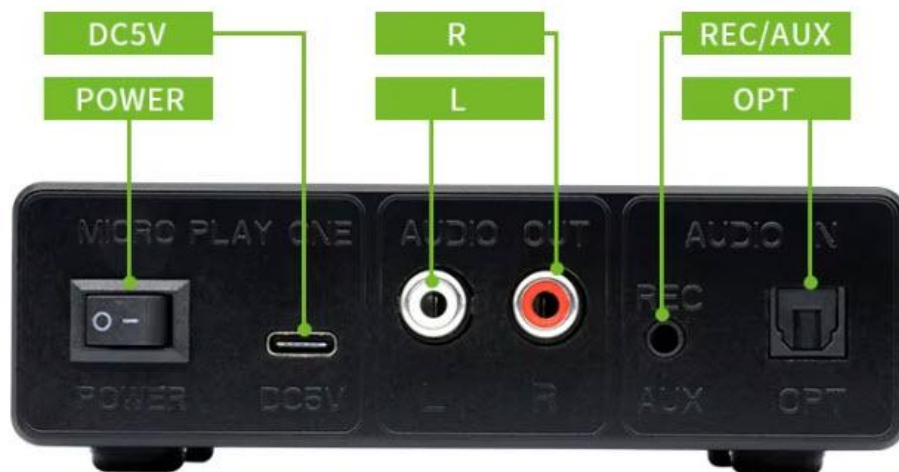

1. Connect R & L outputs to transmitter input using the RCA to 3.5mm patch cord.
2. Connect 5V USB-C power to DC5V.
3. Insert flash drive into USB Pendrive.

Procaster Audio Player User Manual

Remote control functions

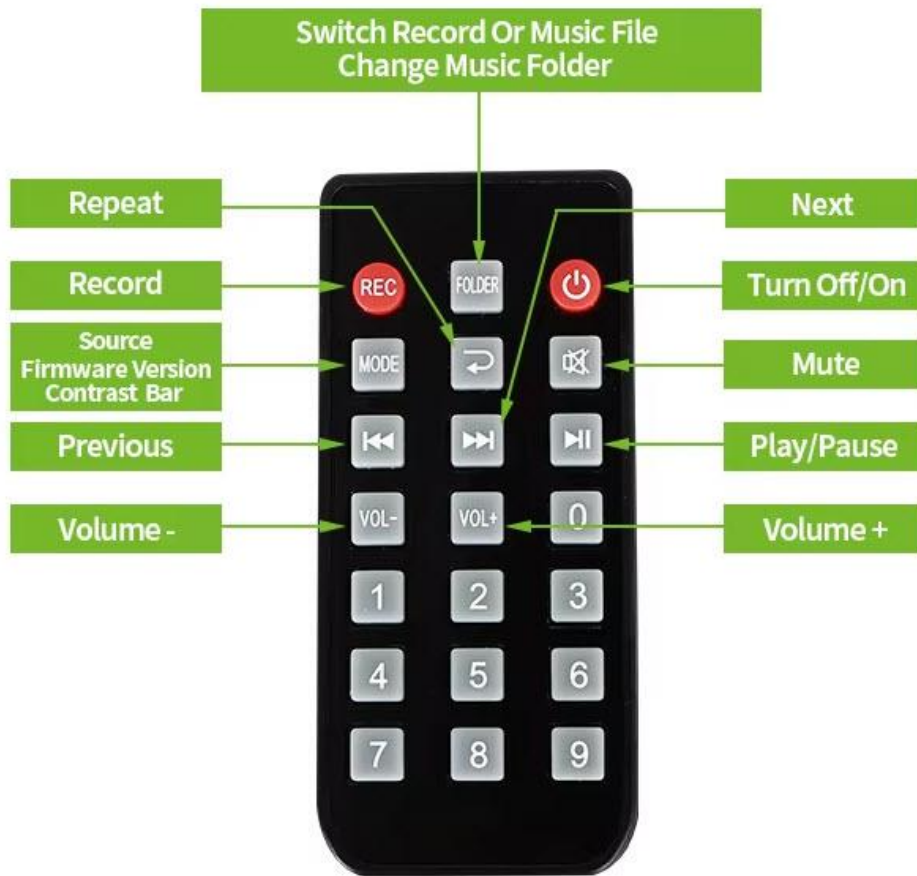

Flash drive, RCA to 3.5mm patch cord and 5V power supply included.

